


2515-A 100 Watt AC/DC Power Supply with Redundancy Support

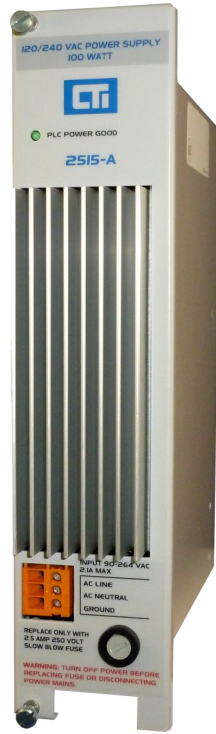

Description

The 2515-A is a 120/240VAC/125VDC Power Supply designed for CTI 2500 Series and SIMATIC® 505® PLCs. The triple-wide module provides up to 100 watts at +5VDC for use by the PLC CPU and I/O modules. When operated in a dual configuration in a 2500-R11-A base, it provides support for power supply redundancy.

Features

- CTI 2500 Series® or Simatic® 505 base format
- 90-240VAC, 47-63 Hz single-phase input power
- 125 VDC input power for utility applications
- Up to 100 watts @ +5VDC to PLC CPU and I/O modules
- Works in CTI 2500-R11-A and Siemens® 505-6511 bases and all other bases

Specifications

Field Connections:

One 3-pin 120VAC/125VDC input terminal strip

Input Voltage Operating Range:

90-240VAC, 47-63Hz, single phase or 90-125VDC

Total Wattage Rating:

100 Watts maximum output @ 0° C to 60° C

Steady State Input Current at full load:

100 Watt Full Load Ratings	
VAC	Amps
90	1.9
120	1.6
220	0.765
240	1.0
VDC	Amps
90	1.47
125	1.0

Peak Inrush Current:

37 Amp. max. @ 240VAC input

⚠ Fusing:

2.5 Amp 250V, 3 AG front panel accessible

Littlefuse #031302.5MXP

Hold Up Time:

104.4mSec @ 100W load

Isolation:

1500VAC: 110/220 VAC-to-Backplane

500VDC: Chassis-to-Backplane

1500VAC: 110/220 VAC-to-Chassis

IEC 60950-1

Module Size: Triple-wide

Shipping Weight: 5.0 lbs (2.3 kg)

Additional Product Information:

On CTI's Website you will find links to the 2500 Series Std Environmental Specifications and the UL Agency Certificates of Compliance .

Note: Currently agency approval is pending.




Control Technology Inc.

5734 Middlebrook Pike, Knoxville, TN 37921-5962
 Phone: +1.865.584.0440 Fax: +1.865.584.5720
 www.controltechnology.com

ROCK SOLID PERFORMANCE. TIMELESS COMPATIBILITY.

Power Supply Location in Base

The 2515-A Power Supply can be installed in single configurations in standard bases (2500-R4, 2500-R8, 2500-R16-A, 2500P-R4, 2500P-R8, 2500P-R16). For redundancy, 2515-A must be installed in a dual configuration in a 2500-R11-A or 505-6511 base. The two power supplies are installed in the leftmost two slots as shown below. The Power Supply must always be installed in the left-most slot of the system base, as shown in the figure below.

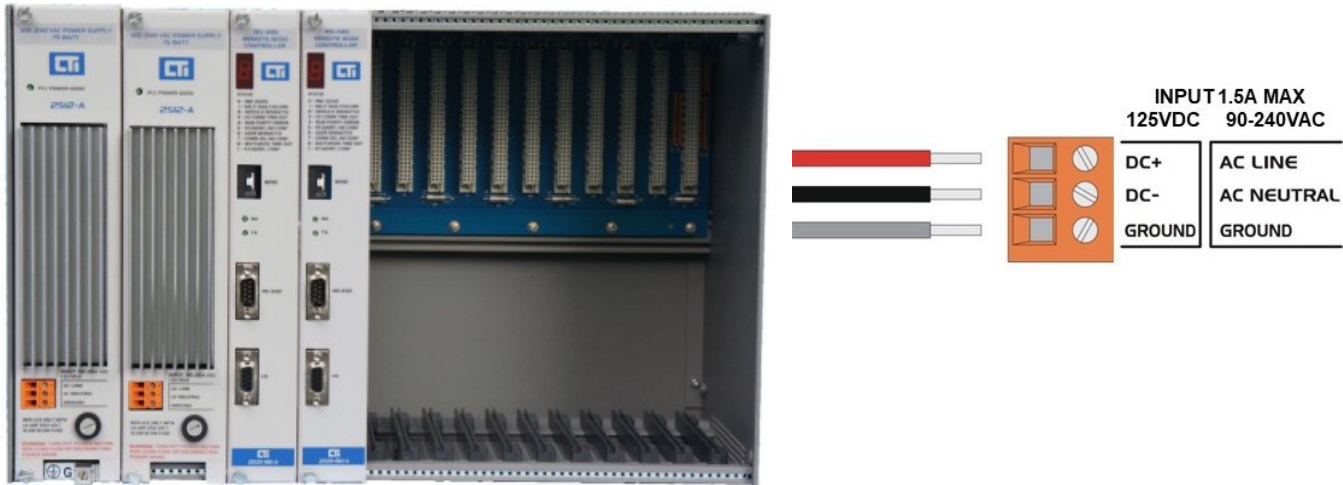

2500-R11 Dual Media Base

CAUTION:

Do not attempt to operate the 2515-A Power Supply out of the Input Voltage Operating Ranges of 90 to 240 VAC or 90 to 125VDC

WARNING:

Disable all power to the power supply before installing or removing the power supply. Failure to do so could cause damage to the equipment or injury to personnel.

Installing and Removing the Power Supply

Use the following steps for installing and removing the 2515-A Power Supply from the system base.

Steps for removing the power supply:

1. Remove power from the power supply. NOTE: In single-supply systems this will shut down the PLC.
2. Loosen the top and bottom bezel screws.
3. Grasp the top and bottom of the power supply.
4. Carefully unplug and remove the power supply from the base.

To install a new power supply, reverse procedures 1 through 4 used for removal and then tighten top and bottom bezel screws.



2500-R11 Dual Media Base



CAUTION – Non-Hazardous Areas/Hazardous Areas

<p>WARNING – EXPLOSION HAZARD. DO NOT REMOVE OR REPLACE WHILE CIRCUIT IS LIVE UNLESS THE AREA IS FREE OF IGNITIBLE CONCENTRATIONS.</p>	<p>AVERTISSEMENT – RISQUE D'EXPLOSION. NE PAS RETIRER NI REMPLACER PENDANT QUE LE CIRCUIT EST SOUS TENSION À MOINS QUE L'EMPLACEMENT NE SOIT EXEMPT DE CONCENTRATIONS INFLAMMABLES.</p>
<p>WARNING – EXPLOSION HAZARD. DO NOT REMOVE OR REPLACE FUSE WHEN ENERGIZED.</p>	<p>AVERTISSEMENT – RISQUE D'EXPLOSION. NE PAS RETIRER NI REMPLACER UN FUSIBLE SI L'APPAREILLAGE EST SOUS TENSION.</p>