


Quick Setup

The MGate series now provides a Quick Setup wizard, an illustrated guide specifically designed to make the configuration process easy. The Quick Setup wizard takes you through the configuration process from start to finish so that you do not miss any step. The following agent modes are supported in the Quick Setup:

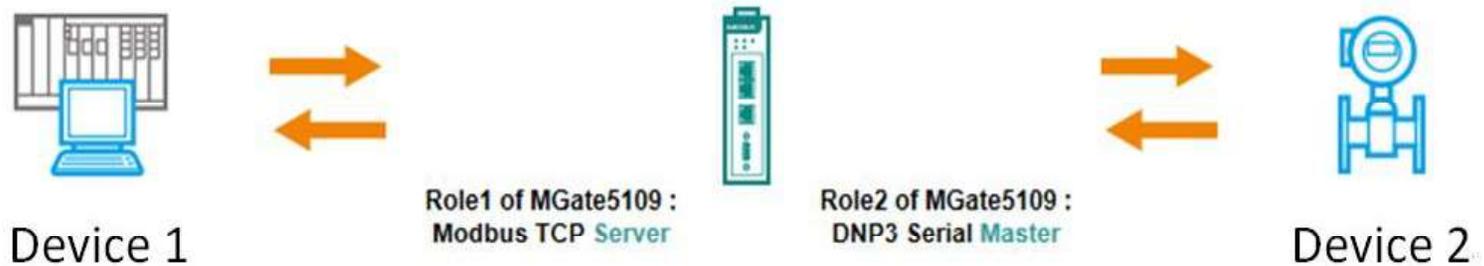

Device 1	Device 2
MB RTU/ASCII Master	DNP3 TCP Outstation
MB TCP Client	DNP3 serial Outstation
MB TCP Client	DNP3 TCP/UDP Outstation
DNP3 serial Master	MB TCP server
DNP3 TCP/UDP Master	MB RTU/ASCII slave
DNP3 TCP/UDP Master	MB TCP slave

Except for above agent modes, other combinations can be configured in **Protocol Settings > Protocol Conversion**. For more information, refer to *chapter 4*.